

# LED Wireless Key Fob Control Unit

MODEL:LL-LED-KEY-FOB-HD



RF  
Remote

On/Off



## SYNC FOB INSTRUCTIONS


1. Apply power to the receiver
2. Within 6 seconds of applying power to receiver push and hold the ON button to sync the fob to the receiver.

## TROUBLESHOOTING:

- If the link is unsuccessful after completing the above 2 steps, repeat . Be sure to firmly push both ON button for at least 3 seconds.

**NOTE:** This product does not have a function to clear the match once a link has been established, but it can be linked to a second receiver and control them both.

### 12v Boat Lift Systems

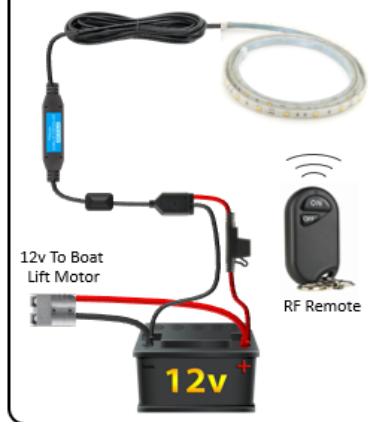


### 24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery



OR

### 12v Boat Lift Systems

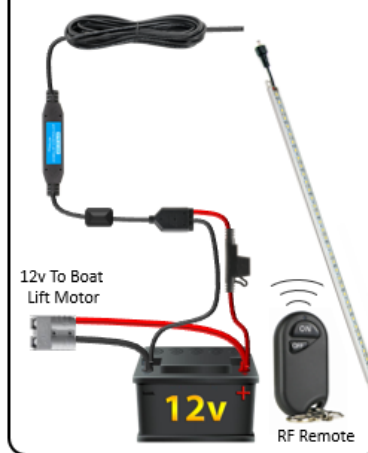

### 24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery



OR

### 12v Boat Lift Systems



### 24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery



# LED Wireless Key Fob Control Unit

MODEL:LL-LED-KEY-FOB-HD

## RF Remote



### SYNC FOB INSTRUCTIONS

1. Apply power to the receiver
2. Within 6 seconds of applying power to receiver push and hold the ON button to sync the fob to the receiver.

### TROUBLESHOOTING:

- If the link is unsuccessful after completing the above 2 steps, repeat . Be sure to firmly push both ON button for at least 3 seconds.

## LAKE LITE / LAKE LIFTER 12v LED LIGHT OPTIONS



**NOTE:** This product does not have a function to clear the match once a link has been established, but it can be linked to a second receiver and control them both.

## 12v Boat Lift Systems



## 24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery

