

# Solar Dock Post Lites



MODEL: LL-SDL-Round / Square / Rectangle




## Changing LED Colors & LED Installation Color LED's - Sold Separately

1. Cut LED Legs to same length for best connection.
2. Insert LED into socket to test illumination in a dark room. If LED does not light, reverse Legs and reinsert until the LED illuminates.
3. Insert LED Legs into the socket and use screwdriver to clamp down the Legs into the blue socket.
4. Bend the LED upward as seen below.


**NEW:** Watch Online Video for Installing & Changing LED Colors!



Cut LED Legs to same Length

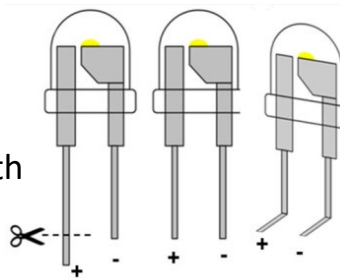

Bent LED Legs Example

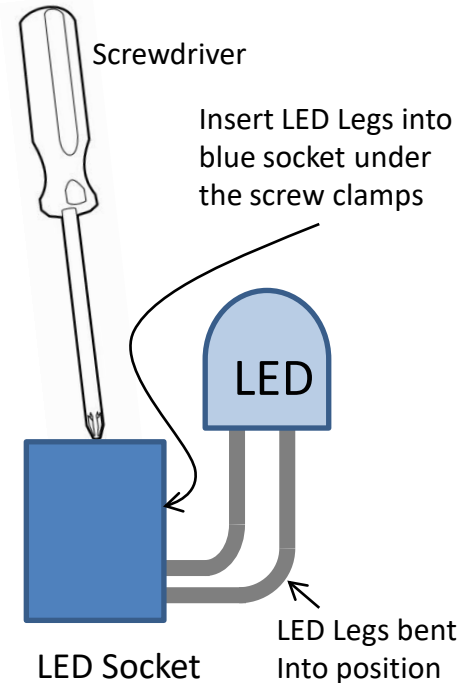

## Troubleshooting

**Q: My light does not work.**

1. Make sure battery is securely in place & in proper position.
2. Your LED may be installed backwards. Try reversing.

**Q: My light has a short run time.**

1. Improper location. The light is powered by the sunlight, place light in direct sunlight.
2. Batteries may be dead, replace with new Ni-Cd or Ni-Mh batteries.

**Q: My light is very dim.**

1. LED may have poor connection in socket: Check connection: (in a very rare instance the LED may be faulty, please contact us)
2. Batteries may be dead, replace with new Ni-Cd or Ni-Mh batteries. – This is the most common reason.



Lake Lite Inc.  
100 Industrial Dr.  
Avilla, IN 46710

Phone: 260-918-2758  
E-mail: sales@lakelite.com  
Web: www.lakelite.com