

LED Wireless Key Fob Control Unit

MODEL:LL-LED-KEY-FOB-HD



RF Remote

On/Off



SYNC FOB INSTRUCTIONS


1. Apply power to the receiver
2. Within 6 seconds of applying power to receiver push and hold the ON button to sync the fob to the receiver.

TROUBLESHOOTING:

- If the link is unsuccessful after completing the above 2 steps, repeat . Be sure to firmly push both ON button for at least 3 seconds.

NOTE: This product does not have a function to clear the match once a link has been established, but it can be linked to a second receiver and control them both.

12v Boat Lift Systems

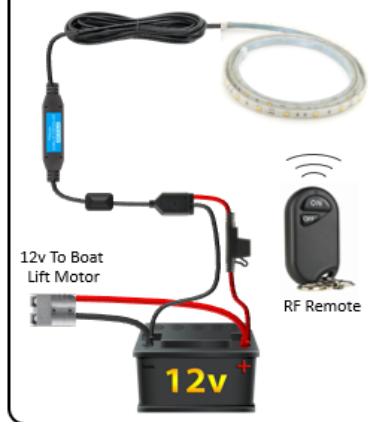


24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery



OR

12v Boat Lift Systems

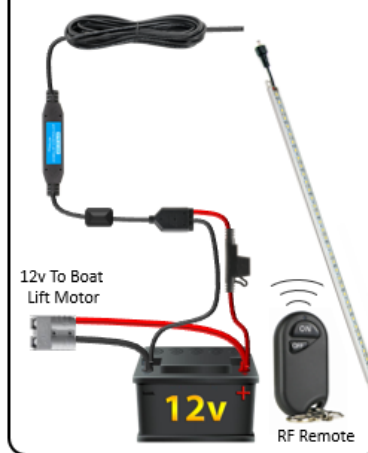

24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery



OR

12v Boat Lift Systems



24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery



LED Wireless Key Fob Control Unit

MODEL:LL-LED-KEY-FOB-HD

RF Remote



SYNC FOB INSTRUCTIONS

1. Apply power to the receiver
2. Within 6 seconds of applying power to receiver push and hold the ON button to sync the fob to the receiver.

TROUBLESHOOTING:

- If the link is unsuccessful after completing the above 2 steps, repeat . Be sure to firmly push both ON button for at least 3 seconds.

LAKE LITE / LAKE LIFTER 12v LED LIGHT OPTIONS



NOTE: This product does not have a function to clear the match once a link has been established, but it can be linked to a second receiver and control them both.

12v Boat Lift Systems



24v Boat Lift Systems

Warning: Only connect the RF Receiver to ONE 12v Battery

