

# Solar Panel Rewiring Kit


Works with Lake Lite 12v & 24v & 36v Solar Chargers:

Model: LL-SP-WIRE-HD




Previous panels may be equipped with a diode as seen below

**Remove this diode if installed**

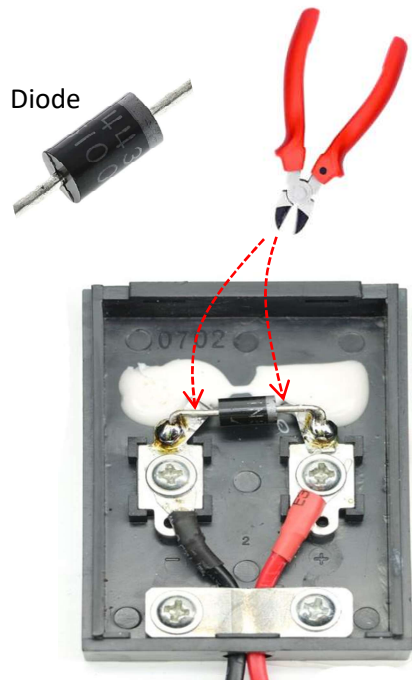


 **Tech Support:**  
Ph: 260-918-2758  
Web: [www.lakelite.com](http://www.lakelite.com)

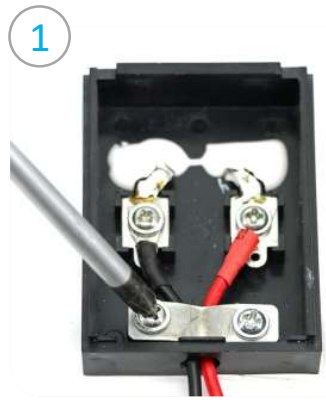

1 Remove the cover & remove the wire clamp




2 Remove old wires or cut them out if they are soldered

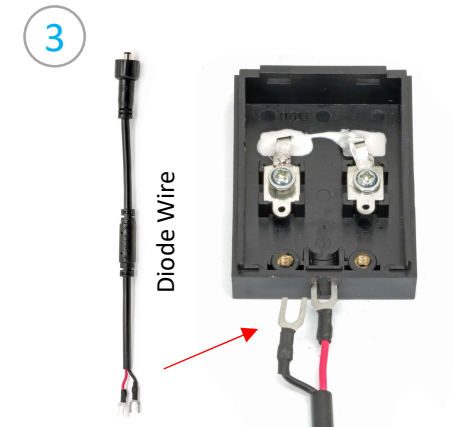

3 Insert diode wires, stagger the fork terminals for easy entry



4 Attach the new fork terminals to the screw terminals & tighten

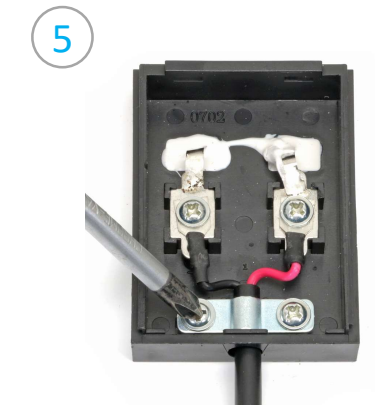

5 Replace the wire clamp with the hump facing downward



6 Replace the cover (Finished Example)

