

Solar Panel Rewiring Kit



Works with Lake Lite 12v & 24v & 36v Solar Chargers:


Model: LL-SP-WIRE-HD




Previous panels may be equipped with a diode as seen below

Remove this diode if installed

Diode

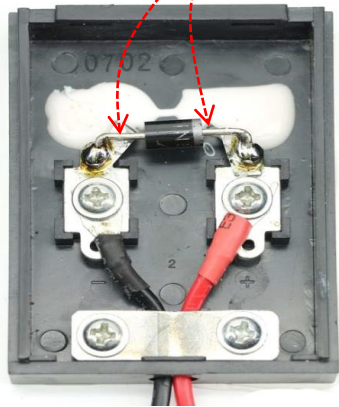

1

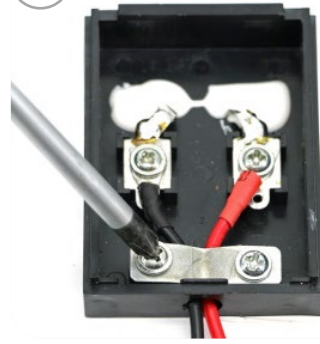


Remove the cover & remove the wire clamp

2




Remove old wires or cut them out if they are soldered

3

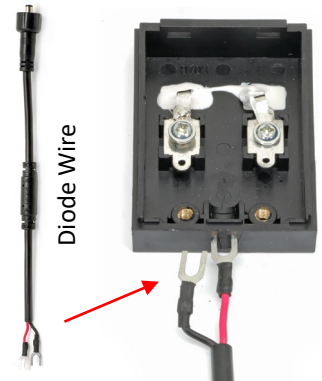


Insert diode wires, stagger the fork terminals for easy entry

4

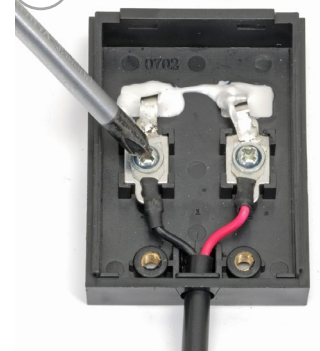

Attach the new fork terminals to the screw terminals & tighten

5

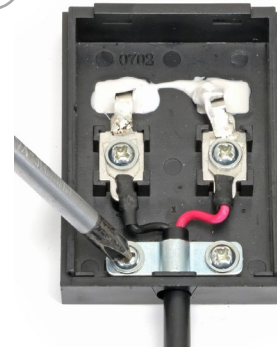

Replace the wire clamp with the hump facing downward

6



Replace the cover (Finished Example)



Tech Support:
Ph: 260-918-2758
Web: www.lakelite.com

